



Fault: No video or audio on HDMI.

Cause: This fault is usually the result of the V-Out button being pushed on the remote control unit, switching the output to component. The V-Out button is designed to allow you to change the video output without having to move through the menu.

Solution: Press the V-Out button on the remote until the front LED display on the receiver reads HDMI. Now the HDMI output will work.

